

AT6AQ Battery Replacement Procedure

The following information is provided to assist in the replacement of the AT6 batteries.

Please view the associated [video](#) which provides a visual representation of the procedure described below.

Tools needed:

- Driver with a TORX # 8 adapter
- Flat Head screwdriver
- Small wood or plastic piece to hold board/SIM assembly during battery replacement




1. Remove the 2 TORX 8 screws on the housing using a screwdriver with a TORX #8 head.
2. Set aside the 2 screws and remove the housing cover.



3. Using a shim, as in the video, carefully disconnect the old battery connection and discard the battery.



4. Continue to hold the shim in place, reconnect a new battery and place it in the housing.
NOTE: The battery connector SNAPS in, it does NOT slide into the connector. Be careful that the pins do not bend, and the tabs do not break when working to reconnect a new battery. You should hear an audible SNAP when the connections are successful, and you should not be able to pull it out easily.
5. Replace cover and reinsert the TORX screws to secure the housing.
6. If you have not yet done so, record the unique serial number of the tracker you just replaced the battery in.
7. Open the N-Link Application and search for the S/N of the tracker you just replaced the battery in. Confirm that the tracker has successfully check into via the application.

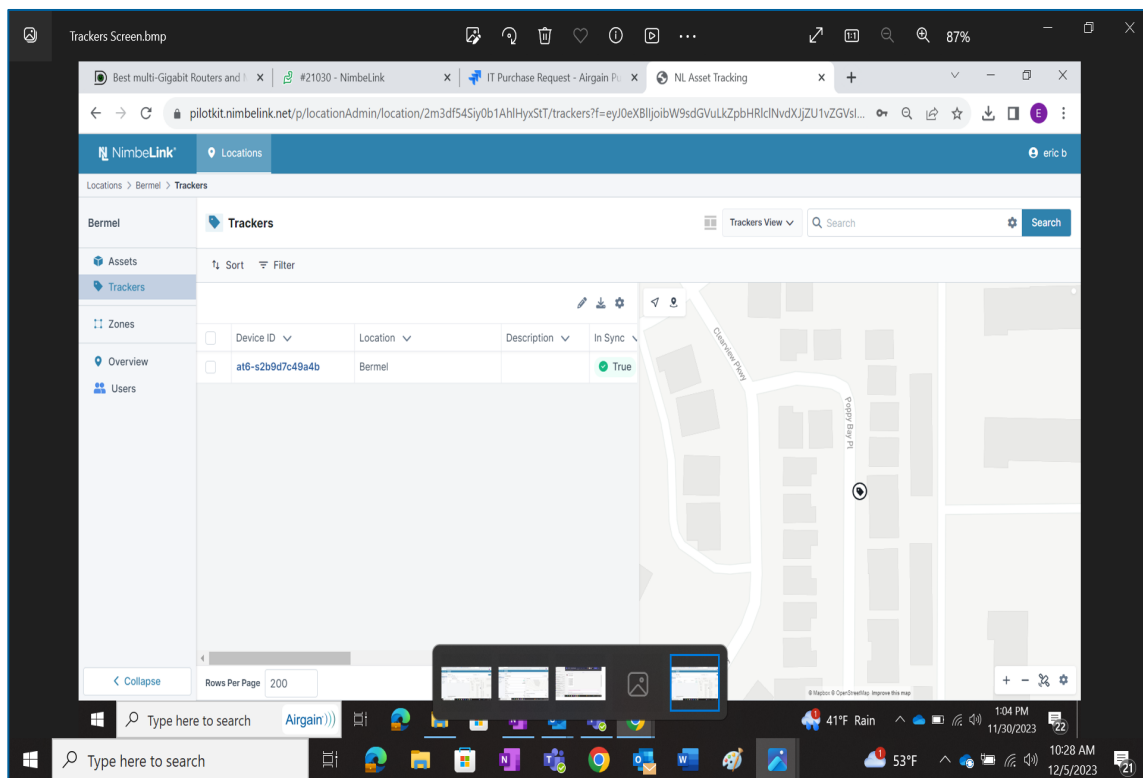

Should you require additional assistance, please email solution.support@airgain.com