

Adhesive Mount Antenna Removal Guide

Recommended tools:

- **Windshield removal tool or similar device** (.025" diameter cable, 30 lb. test fishing line, or used guitar string can be substituted)
- **Soft disposable rags**
- **Adhesive remover** (3M™ General Purpose Adhesive Cleaner #08984 is recommended)
- **Soft plastic scraper**




1




Slide a small diameter cable or cord under the gasket of the antenna. (See Recommended tools list above).

2

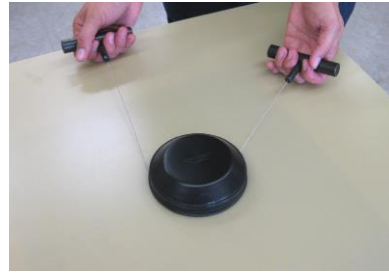

Pull the cable under the antenna and use a sawing action to cut the adhesive pad. **(CAUTION! Use care when cutting so you do not cut through the wire harness in the center of the antenna.)**

3

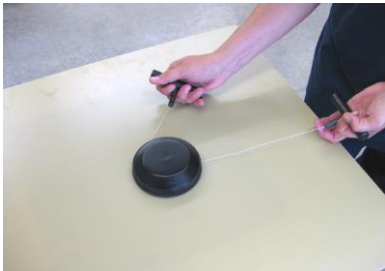

Continue cutting around the antenna to release the entire adhesive pad.

4



After cutting through the adhesive pad, remove the antenna and disconnect it from the wire harness.

5



Remove any remaining pieces of the adhesive pad with the plastic scraper.

6



Using a quality adhesive removing solvent and a soft clean cloth to remove any of the remaining adhesive from the vehicle.


Adhesive Pad Installation Guide

1



Clean the underside (base) of the antenna with isopropyl alcohol and allow to dry.

2

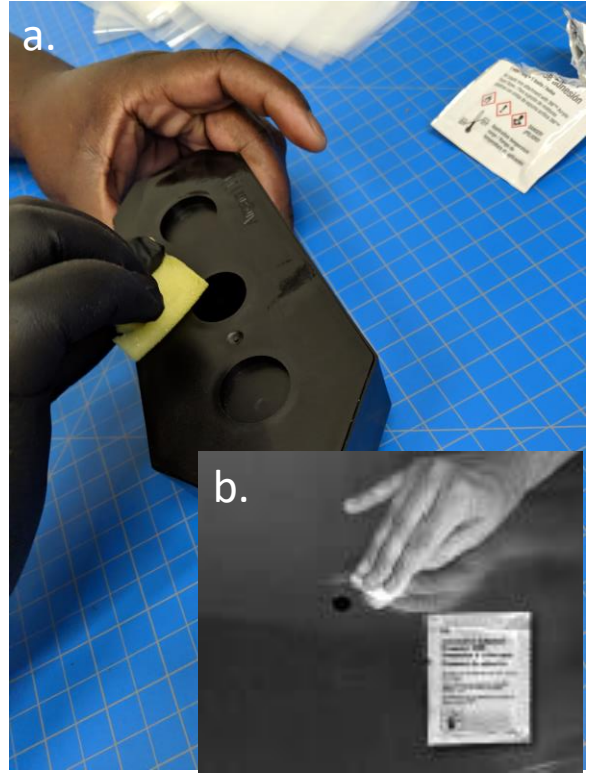

a. Prep that same surface with adhesive promoter and allow to dry. b. Apply adhesive promoter to mounting surface.

3



Remove backing from adhesive pad, center to bottom of housing, place, and press down using firm hand/finger pressure along entire adhesive pad surface to adhere evenly to base of antenna.

Note: For the Ultramax MIMO antenna only (shown above), the brown paper backing side of the adhesive pad goes on the antenna base.